

acuTouch™ 9500



human touch®

humantouch.com

800.355.2762



 human touch®
massage chairs

use & care manual

©2010 Human Touch®, LLC. Patents pending and intellectual property rights enforced.
No medical claims are warranted or implied by the use of this product.
Human Touch is a trademark of Human Touch®, LLC.
HT-9500-NA-A0

Human Touch®
Partners in Your Well-Being

For decades, Human Touch has been a leader in the field of massage products. We create state-of-the-art products that embrace the latest technology while applying the ancient healing art of massage. Balancing your physical and mental needs requires the right mix of proper nutrition, exercise, and massage. Human Touch® Massage Systems are vital components for achieving balance between physical and mental well-being.

To learn more about our company and our products, we invite you to visit us on the Internet at: www.humantouch.com or call our Customer Service Representatives at 800-355-2762.



Please send any questions or comments regarding this manual to documentation@humantouch.com

©2010 Human Touch, LLC. Patent pending. All rights reserved.

Human Touch and feel better® are registered trademarks of Human Touch, LLC. HT-Connect™ and AcuTouch™ are trademarks of Human Touch, LLC. Apple®, iPhone®, iPod®, and the “Works with iPhone®” and “Made for iPod®” logos are registered trademarks of Apple, Inc.

The “Made for iPod” and “Works with iPhone” logos indicate that this product has been designed specifically to work with iPod and iPhone. The manufacturer certifies that this accessory has been made in accordance with the high standards of quality and performance that is expected from iPod, iPhone and Apple. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Human Touch® is under license. Other trademarks and trade names are those of their respective owners.

No medical claims are warranted or implied by the use of this product. Specifications are subject to change without notice.

acuTouch™ 9500

welcome to human touch®

Your AcuTouch™ 9500 massage chair is the perfect bridge between state-of-the-art technology and the ancient healing art of massage. It's a key ingredient for a balanced life—and it's right in your own home! Your massage chair incorporates patented Robotic Massage® technology, emulating the same techniques used by massage and chiropractic professionals for back and spinal care. It's hard to believe it's not human!

Your AcuTouch™ 9500 massage chair is the first Human Touch chair to feature HT-Connect™—a revolutionary interface that lets you customize your chair to your personal wellness needs to feel better everywhere™ using your iPhone 3GS or iPod touch 2G device. HT-Connect™ takes personal wellness to a whole new level, providing instant access to a wealth of massage programs, expertise, and time-saving applications to enhance your massage experience using the wireless device in your pocket. So, your wellness goes wherever you go and you get the massage you need when you need it.

To ensure that you don't overlook any of your chair's features, and that you use it safely, read this manual carefully. Then sit back, relax, and enjoy!

humantouch.com

keep it safe

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.



DANGER: To reduce the risk of electrical shock

Always unplug this product from the electrical outlet immediately after using and before cleaning.



WARNING: To reduce the risk of burns, fire, electric shock or injury to persons:

- Do not put hands or fingers near the massage mechanism or rollers while this product is running. Touching the mechanism can result in injury from the rollers squeezing together.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this product is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support (or other similar parts).
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return this product to a service center for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle.
- Always keep the power cord away from heated surfaces.
- Never operate this product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the OFF position, then remove plug from outlet.
- Do not massage any area of the body that is swollen, inflamed or covered with skin eruptions.
- Do not use on unexplained calf pain.
- Do not use this product when standing on a damp floor, or when any part of the body is in contact with plumbing or any similar ground.
- Connect this appliance to a properly grounded outlet only. See GROUNDING INSTRUCTIONS.
- Do not use this product if noise above normal sound is heard.
- Do not stand on or in appliance. Use only while seated.
- Use heated surfaces carefully. May cause serious burns. Do not use over sensitive skin area or in the presence or poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Anyone with a medical condition, including those who are or may be pregnant, should consult a physician before using any massage product.
- After servicing, zipper must be fastened by wire tie.

Safety Precautions

- Comfortable clothing is recommended while using this product.
- This product was meant to be used in a relaxed position. Never force any body part into the backrest area while the rollers are moving.
- If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and do not use the product. Consult your physician.
- Do not sit on the controller.
- Do not pull on the AC cord.
- When using this product after it has been in storage, check to see that the product is operating properly prior to use.
- Always confirm that there are no obstacles behind the product and that there is sufficient space to recline.

SAVE THESE INSTRUCTIONS

Do not attempt to repair this product yourself.

This product is designed for personal in-home use. Commercial use will void warranty.

Grounding Instructions:

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.




DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electronic shock. Check with a qualified electrician or serviceman if you are in doubt as to whether this product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a normal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch (A). A temporary adapter that looks like the adapter used in sketches (B) and (C) may be used to connect this plug to a 2-pole receptacle as shown in sketch (B), if a properly grounded plug is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored, rigid ear tab or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

For all grounded cord-connected products:

Grounding methods:

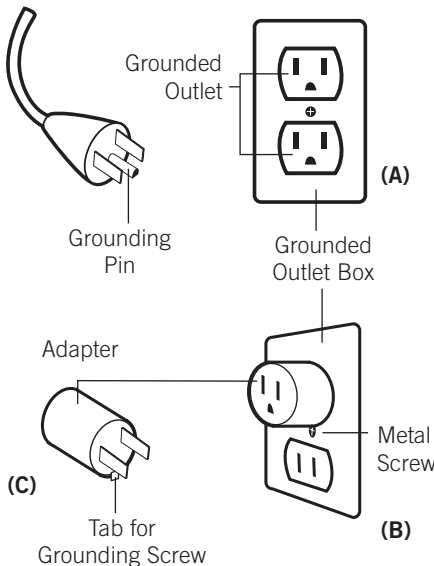

The use of a temporary adaptor is not permitted in Canada.



WARNING: This product is equipped with a thermal resetting protection device. This is an added safety feature to protect you and this product from overheating. If the product should suddenly stop and will not start, turn the main power switch, located on the back of the product, off and do not operate the product for at least 30 minutes. Failure to turn the product off may result in the product starting unexpectedly when the device cools.

get ready

Your Human Touch massage chair comes fully assembled — simply connect the power cord, plug it in, install the head pillow and/or Luxury Ergo Pillow, and you're done!



Unpack the box




1. Connect the power cord



Plug one end of the power cord into the power panel AC power jack and the other end into a 120-volt wall outlet.

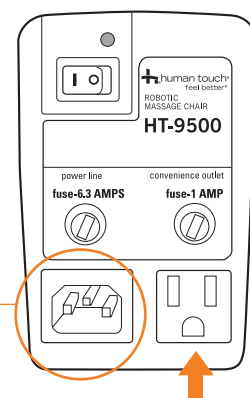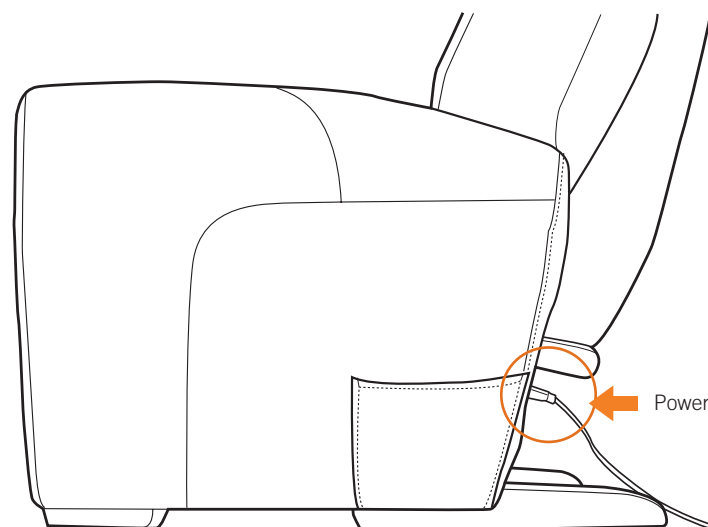


The Human Touch massage chair power panel offers a **convenience outlet**, which enables you to plug in a low-wattage appliance such as a lamp or laptop. Do not plug in appliances that use wattages higher than 1 AMP, such as a vacuum or a hair dryer.

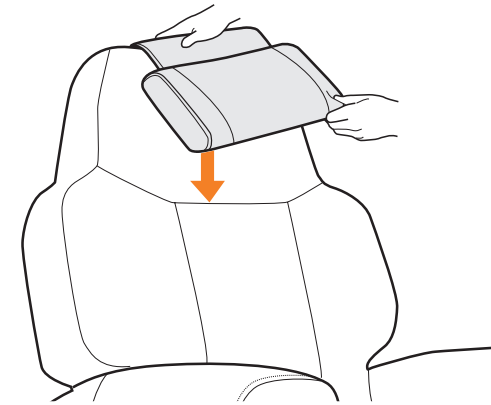


2. Install the head pillow

Place the head pillow flap over the top of the headrest to secure the headrest in the desired position. The weighted pillow flap keeps the head pillow in place.

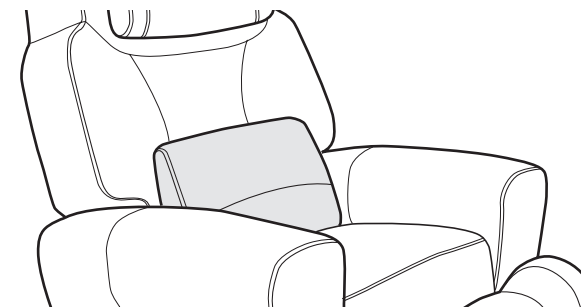

3. Place the Luxury Ergo Pillow

You may want to place the Luxury Ergo Pillow at the base of the backrest, as the pillow helps to position your body properly for foot and calf massages.

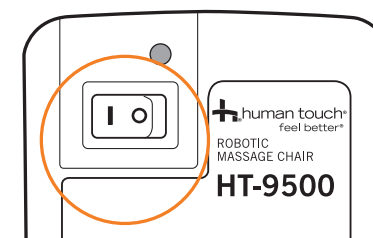

4. Power on

Turn the power switch to On (I). The LED lights to confirm that the chair is receiving power.



get ready

part II

USING THE FINE FLOOR PROTECTOR


Your Human Touch massage chair is a powerful precision instrument. An optional floor protector is included to ensure smooth operation on fine wood, tile, or thick-pile carpeted floors.

Installing the floor protector guards against possible floor damage due to long-term, repeated foot and calf massager deployment.

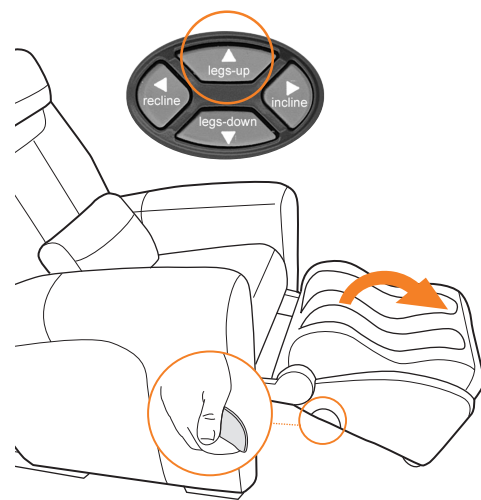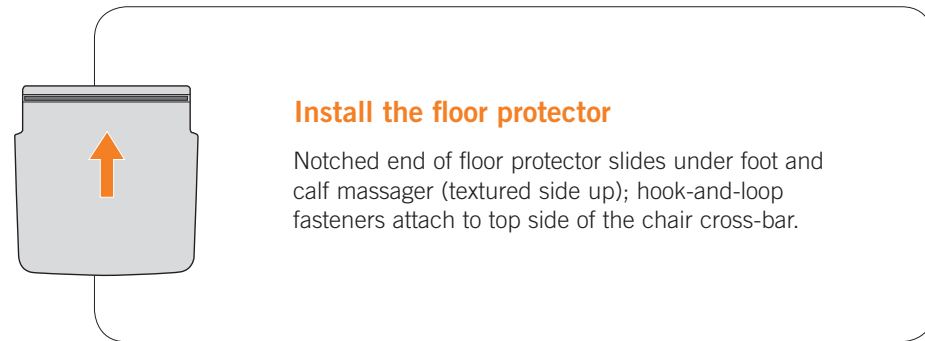

1. Deploy the foot and calf massager


Press the legs-up button on the remote control to fully deploy the foot and calf massager. Pull up on the footrest release handle (located on the right-hand side of the footrest), then rotate the footrest away from the chair until there is enough room to reach underneath the front of the chair.

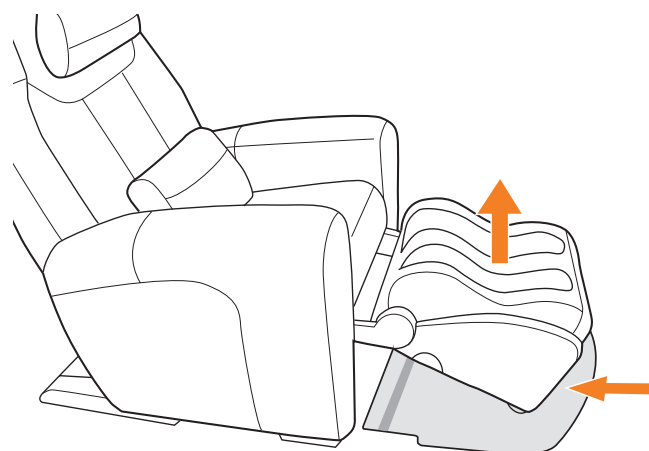

2. Place the floor protector


! For your safety, before installing the floor protector, be sure to turn off the chair at the main power switch and unplug the power cord.

With the hook-and-loop fastener strip facing down, slide the floor protector into place as shown.

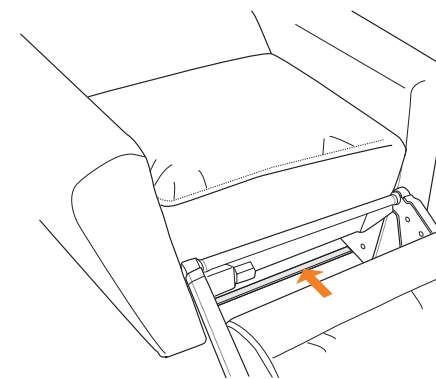

3. Secure the floor protector

Align the hook-and-loop fasteners on the underside of the floor protector with the hook-and-loop fasteners on top of the chair crossbar. Press the hook-and-loop edge of the floor protector firmly into place to secure it.

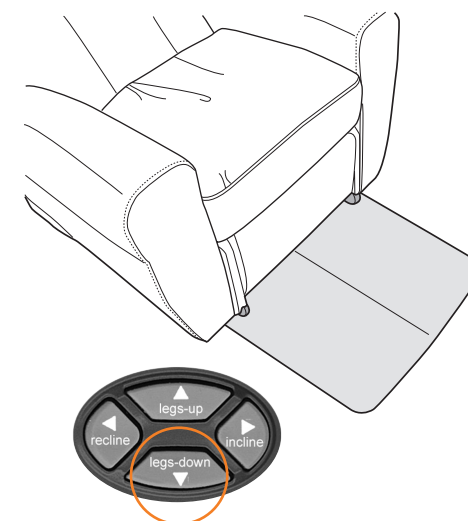


4. Complete the installation

Remove any packaging materials left under or around the chair during installation. Return the foot and calf massager to its original locked position. Plug in the chair and power it on. Press the legs-down button to retract the foot and calf massager.

⦿ Remove the floor protector before moving the chair to a new location.

take a seat

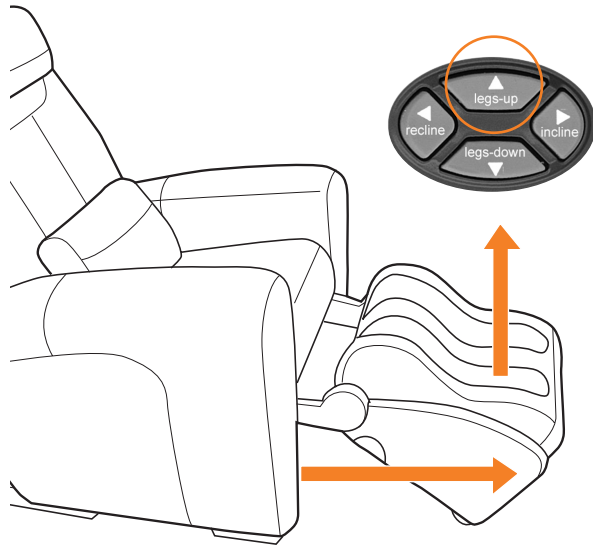


1. Deploy the foot and calf massager

Before deploying the foot and calf massager, be sure the area in front of the chair is clear of any obstructions.

While sitting in the chair, use the remote control legs-up button to deploy the foot and calf massager.

The foot and calf massager deploys outward and then upward. You can use the foot and calf massager in any position once it leaves the floor.

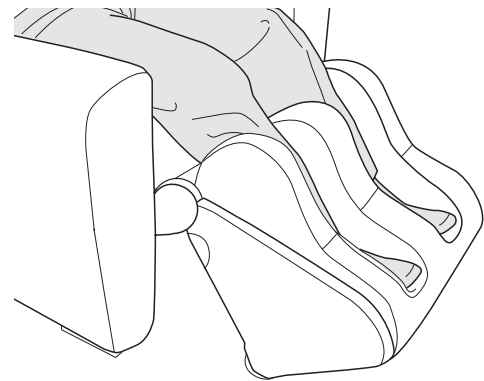

2. Insert your legs into the foot and calf massager

Place your feet all the way into the foot and calf massage wells. The bottom of your feet and the back of your calves should be touching the well walls.

Should you accidentally attempt to retract the footrest while your legs are in the foot and calf massager, the Human Touch massage chair automatically turns off to protect you from injury.

- When changing direction (from Recline to Incline and from Leg Up to Leg Down), there is a slight pause while the chair gears shift. This is perfectly normal.


Using your Human Touch massage chair is easy. Just take a seat, deploy the foot and calf massager, adjust the backrest, and you're ready for the massage of your choosing. Your Human Touch massage chair expertly soothes tired muscles from head to toe, using a wide variety of massage techniques that you control.



3. Adjust the backrest

Before adjusting the backrest, be sure the area behind the chair is clear of any obstructions.

Use the remote control recline and incline buttons to adjust the backrest angle for maximum comfort.

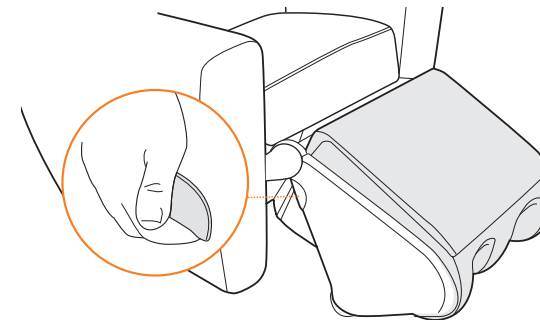


4. Converting the foot and calf massager to a footrest

- While sitting in the chair, pull up on the footrest release handle (located on the right-hand side of the footrest to release the footrest.)
- Rotate the footrest away from the chair until it locks into position with the smooth side facing up.
- Release the footrest release handle.

- For an easier exit, retract the footrest and restore the backrest to a full upright position before getting out of the chair.

Make sure the area behind/underneath the footrest is clear of any obstructions before retracting the footrest.



With the foot and calf massager on top, press and hold the legs-down button to retract the footrest. Press and hold the Restore button  to return the backrest to a full upright position.

take control with HT Connect™

INTRODUCING HT CONNECT™

Your AcuTouch 9500 massage chair enables you to control and expand your massage experience using the HT-Connect app and your iPod touch or iPhone, using Bluetooth® wireless technology. However, you may also use the remote control that is connected to your chair to perform many of the same massage functions. For information on using the chair's remote control, go to page 16.

HT-Connect works with the following hand-held devices:

Apple iPhone 3GS running OS 3.0 or later

Apple iPod touch 2G

Corded Controller



iPhone or iPod touch with HT-Connect™



1. Download the HT-Connect app



Download the HT-Connect™ app from the Apple App store. You can explore the app's features and wellness information whether or not your iPhone or iPod touch is connected to your AcuTouch™ 9500 massage chair.

2. Get connected

HT-Connect is wireless, providing all the convenience of Bluetooth wireless technology. To connect the HT-Connect app to your chair:




- Plug in your chair and power it on.
- Open the Bluetooth settings on your iPod touch or iPhone and pair your device to the chair (NOTE: Your chair's unique ID begins with HT9500xxxx).
- Start the HT Connect app on your iPod touch or iPhone to display the home screen, then touch **connect** to connect the app to your chair.
- Touch **continue** to bypass the screen that instructs you to open your Bluetooth settings and pair your iPod touch/iPhone to the chair. The **gateway** screen is displayed.

take control with HT Connect™


3. Personalize it

a. On the **gateway** screen, touch **set-up**.

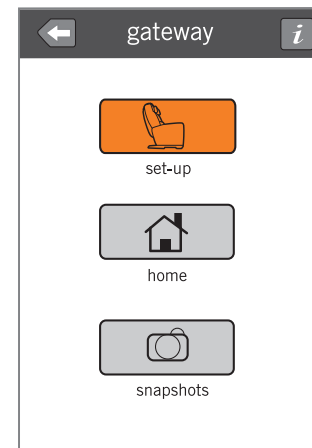

b. You can set up a personal ID to save your favorite massage settings, including backrest and footrest position, massage intensity, vertical massage range, and your favorite massage program. This makes it easy to recall all of your favorites with the touch of a button.


On the **personal ID** screen, touch **enter personal ID** to display a touchpad keyboard, enter a personal ID using up to six alphanumeric characters, touch **done**, then touch **save** to save your ID and continue to the **acupoint detection** screen.

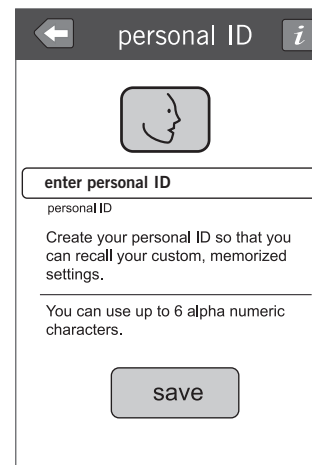

c. Lean back against the backrest, then touch **detect**. Your chair slightly reclines the backrest, then measures and customizes your personal massage range settings.

A timer displays during acupoint detection, followed by a confirmation screen when detection is complete.

NOTE: If you touch **cancel** during acupoint detection, the **detection interrupted** screen is displayed. Touch **continue** to skip acupoint detection or **retry** to resume detection.

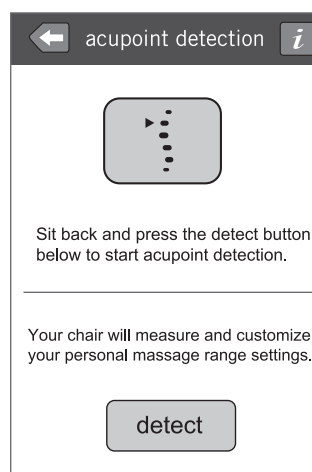

4. Get acquainted

When acupoint detection is complete, touch **continue** to display the **feel better®** home screen.


Settings - Touch to display **gateway** screen for access to set-up and Wellness Snapshots.

Posture - Touch to display posture controls and personal ID recall button.

Auto Programs - Touch to display automatic programs menu.

Daily Program Window - Indicates the daily program that will begin when you touch the **start** button. To choose an alternate program, touch the daily program window to display a collection of alternate daily auto programs. (see page 15 for more information).

Timer - Touch to display the timer screen if an automatic program or Espresso Shot is running.

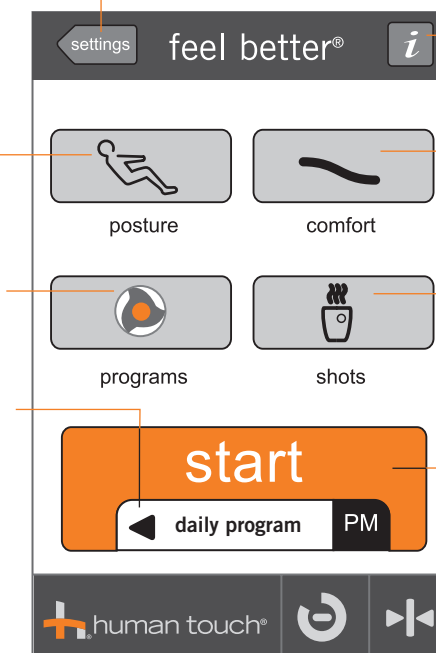

Touch for more information about the current screen.


Comfort - Touch to display massage comfort controls, including massage intensity, vertical massage range and heat.

Espresso Shots - Touch to display the **espresso shots** screen for a quick targeted massage, or to build a full 15-minute custom experience.

Daily Program Start - Touch to start the daily program that is displayed in the daily program window. Chair automatically adjusts posture and comfort settings to match daily program.

Restore - Touch to stop any running functions and restore backrest to upright position. Automatically displays the **posture** screen from which you can retract the legrest.


take control with HT Connect™

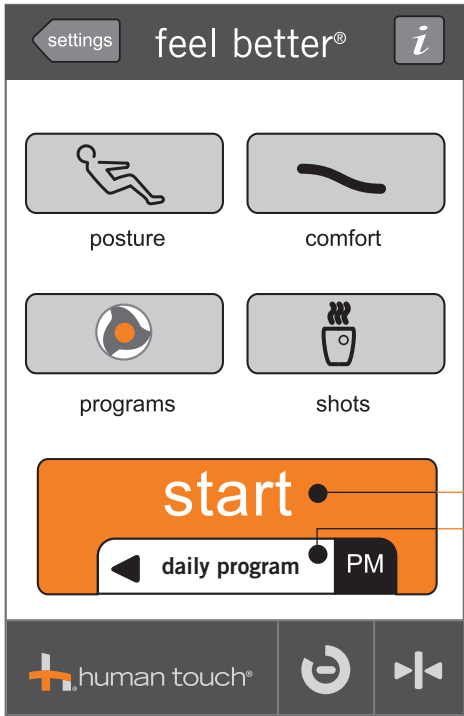

Warning: While using HT-Connect to customize and control your AcuTouch 9500 massage chair, the chair often moves automatically to implement your desired settings. Ensure that the area around the chair is free from any obstructions before using the chair.


AUTOMATIC DAILY PROGRAMS

HT-Connect knows what you need when you need it. No matter what the time of day, it serves up a suitable automatic massage program in the daily program window. Simply touch **start** to start the recommended program.

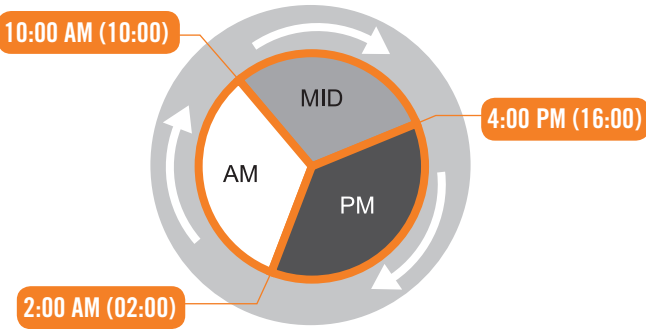

RATHER CHOOSE YOUR OWN PROGRAM? Just touch the daily program window to display the **daily program** screen, which contains nine different programs. The code on the right-hand side of the wheel indicates whether the program is ideal for morning (AM), mid day (MID) or evening (PM).

Select the desired program, then touch **start** to begin your massage.

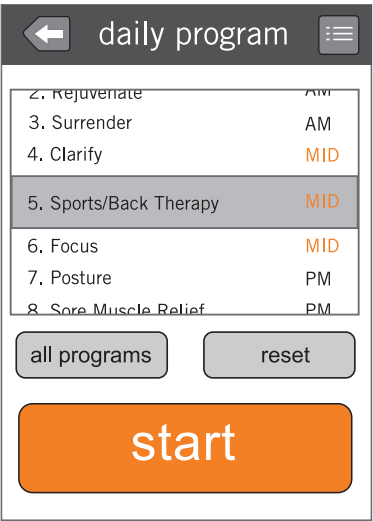

take control using the remote control

Get acquainted with the remote control

The Human Touch massage chair has a full-featured remote control, designed to make navigating the wide array of features easy. The remote is divided into several sections, spanning the front, back and side. Each section controls a different group of features.




Using your Human Touch massage chair remote control lets you easily customize your massage to suit your needs.

Select a stationary massage technique or a rolling massage, or combine them! Or select one of eight Auto Massage Programs. Each Massage Program is designed to meet a daily routine, such as sore muscle relief or an after-work stretch.

Fine-tune your massage using the unique Message/Comfort Number and Acupoint detection features. Explore each of the lower body massage options, which target calves, feet, and seat.

When you're finished, store the remote control in the convenient storage pocket.

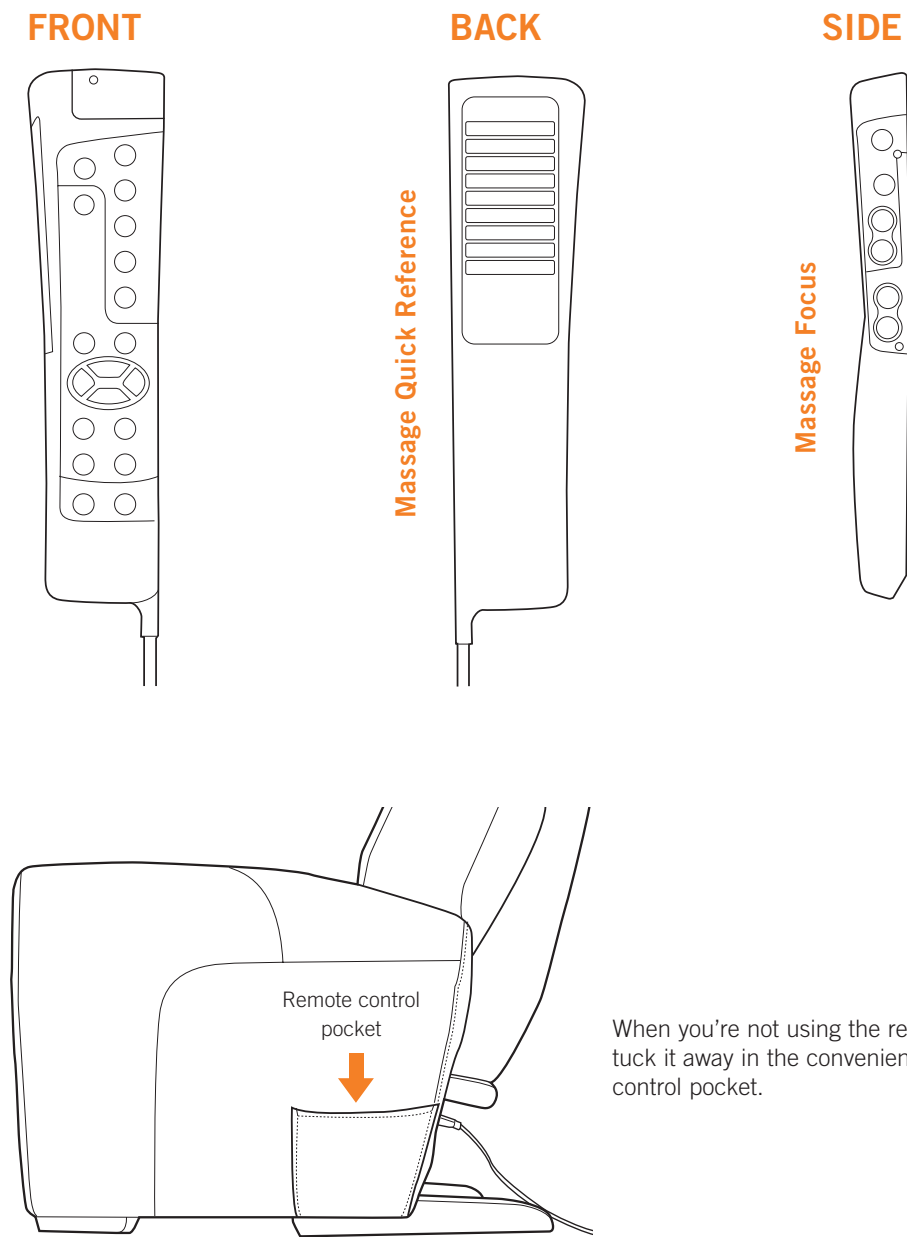


take control using the remote control

8 Auto Massage Programs




Download the **Human Touch HT-Connect™ app** to your iPod touch or iPhone for instant access to a world of resources, additional massage programs, and expertise designed to improve your wellness and life. *See page 10 for details.*

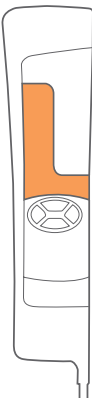

Acupoint Detection

Press before selecting a manual massage technique. Massage rollers scan your back to detect your accupressure points, then target the massage accordingly. Do not adjust the chair recline angle after selecting Acupoint, as doing so causes the Acupoint detection result to be inaccurate. Before pressing the Acupoint button, the Height must be set to Tall (III) and the Massage/Comfort Number must be set to under 3 (see page 24 for more information about Massage/Comfort Number).

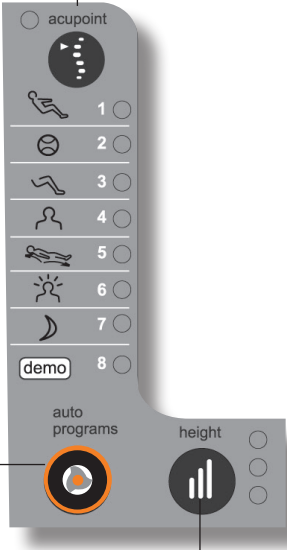

Shoulder Height — Press to select tall (III), medium (II) or short (I), based on your height, to position the massage rollers for maximum comfort.

Auto Program — Press to toggle between Auto Massage Programs until LED lights next the desired program.

⦿ To bypass Acupoint detection, use the Height button to fine-tune the massage based on your height.

Auto Massage Programs		
Press to toggle		
1	FULL BODY SORE MUSCLE RELIEF Includes Acupoint detection	A heated full-body massage that includes a 3-minute warm up, 9 minutes of high-intensity massage, and a 3-minute cool down.
2	SPORTS AND BACK THERAPY Includes Acupoint detection	A heated back/calf/foot massage that includes a 3-minute warm up, 9 minutes of high-intensity massage, and a 3-minute cool down.
3	LEG/FOOT/HIP THERAPY	A seat/calf/foot massage that maintains its intensity from start to finish.
4	NECK/SHOULDERS RELIEF Includes Acupoint detection	A heated upper-back massage that includes a 3-minute warm up, 9 minutes of high-intensity massage, and a 3-minute cool down.
5	AFTER WORK STRETCH Before selecting this program, make sure the foot and calf massager is deployed.	A heated mid/lower-back stretch massage that includes a 3-minute warm up, 9 minutes of medium-intensity massage, and a 3-minute cool down.
6	MORNING WAKE-UP Includes Acupoint detection	A heated full-body massage that includes a 3-minute warm up, 9 minutes of medium-intensity massage, and a 3-minute cool down.
7	NIGHT TIME SOOTHING Includes Acupoint detection	A heated full-body massage that includes a 3-minute warm up, 9 minutes of low-intensity massage, and a 3-minute cool down
8	MASSAGE DEMONSTRATION Includes Acupoint detection	Demonstrates all massage functions.

Intensity Meter

- High Intensity:** Kneading, Percussion, Compression, Kneading/Percussion - all speeds
- Medium Intensity:** Kneading, Percussion (limited duration), Compression, Kneading/Percussion (limited duration) - one speed
- Low Intensity:** Kneading, Compression, Kneading/Percussion (very limited duration) - one speed
- Warm-up Intensity**
- Cool Down**

take control using the remote control

Width — Focus or diffuse massage pressure by selecting the wide, standard, or narrow massage setting. This feature works with Roll, Percussion and Compression massage techniques. Select the width setting **after** selecting a massage technique.





MASSAGE TECHNIQUES

Message Mode	ROLLING	PERCUSSION	COMPRESSION	KNEADING	SEAT	HEAT
What It Does	Rolls gently up and down your back near your spine.	Alternates rapid-tapping strokes along the spine to stimulate both spinal muscles and spinal joint areas, emulating the percussive massage technique used in sports medicine for deep muscle therapy.	Presses on spinal muscles and spinal joint areas using alternating strokes and a gentle rocking motion, emulating a technique used in sports medicine and in spinal therapy by chiropractors.	Kneads your back in a small, circular motion on both sides of your spine simultaneously.	A series of air bags located in the seat pad inflate and deflate to create a unique seat massage.	Two lumbar heat modules gently warm the lower back muscles, gradually reducing tightness and pain.
Benefits	Warms and loosens your muscles, preparing your back for deeper massage. Relieves muscle tension, improves circulation and relaxes the back.	Flexes spinal joints and relieves pressure on the spinal column, invigorating the entire back area.	Spreads and applies pressure to deep muscle tissue, forcing it to relax, while the rocking motion loosens spinal joints. Aides in muscle and joint repair due to strain from exercise, long hours bent over a desk, or just day-to-day stress, and can improve mobility and overall posture.	Relieves tension and soreness by lifting and stretching muscles. Improves circulation and helps bring vital nutrients to the spinal area.	Soothes tired seat muscles, caused by sitting in uncomfortable chairs or sitting for long periods of time.	Heat calms and soothes back muscles, preparing them for a more restorative massage and faster healing.

take control using the remote control

Body Position Navigator

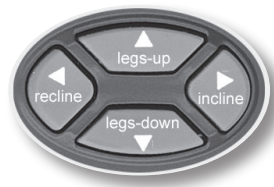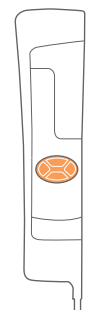


Legs-up — Deploys the footrest from a retracted position and presents the foot and calf massager, ready for use. Use this button to raise the footrest to the desired height.

Legs-down — Lowers the footrest to a fully retracted position (foot and calf massager must be on top before retracting the footrest). *Make sure the area behind/underneath the footrest is clear of any obstructions before retracting the footrest.*

Recline — Reclines the backrest to a horizontal position.

Incline — Raises the backrest to a vertical position.

Lower Body Massage (Calves, Feet, Seat, Arms)

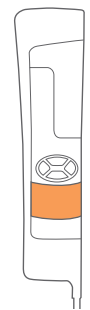


Circulate — Activates the calf vibration.



Massage — Press to toggle among two fixed speeds and two auto foot and calf massage programs.

Seat (Air Impulse Massage Seat) — Activates the unique seat massage, which uses two rows of rapidly inflating/deflating air bags and a layer of Visco foam to create a precision seat massage.

Cancel and Restore

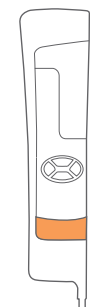

Restore — Press and hold this button until the backrest returns to the full upright position.

Stop/Park — Stops the massage and parks the massage rollers at the top of the backrest.

Massage Focus



SIDE



Heat — Slowly heats up the lumbar region of the backrest to subtly soothe tired lower-back muscles.

Zone — Press to target your massage to a three-inch zone. Use the Position buttons to focus your massage on the desired area.

Position (up/down arrows) — Use these buttons along with one of the manual massage techniques to focus your massage on the desired area.

take control

using the remote control

Massage Comfort Number

Massage/Comfort Number — Seven settings fine-tune message intensity and contour using the revolutionary Adaptive Massage Comfort Control technology.



Decrease message intensity and create soft support

7

6

As you adjust your personal Massage Comfort, the numbered LED scale keeps track of your settings.

5

Customize the Massage/Comfort settings as often as you like during all massage modes. Even when you're not enjoying a massage, use the Massage/Comfort control to customize the backrest support while sitting in the chair.

4

3

Use the massage comfort number scale anytime you want to return to your favorite custom setting.

2

1



Increase message intensity and create firm support

As you select different Massage/Comfort numbers, the message intensity/backrest contour changes accordingly.

● You can adjust the Massage/Comfort setting while your massage is in progress.


● Set the Massage/Comfort Number to under 3 when using Acupoint Detection (see page 14 for more information about Acupoint Detection).

For a softer massage:

1. Press and hold the ① button to decrease message intensity and soften the backrest cushion. As you hold the ① button, the Massage/Comfort number lights ascend, indicating which Massage/Comfort number is currently selected.
2. Release the ① button when you reach the Massage/Comfort number that is most comfortable for you.

For a more intense massage:


1. Press and hold the ② button to increase message intensity and firm up the backrest cushion. As you hold the ② button, the Massage/Comfort number lights descend, indicating which Massage/Comfort number is currently selected.
2. Release the ② button when you reach the Massage/Comfort number that is most comfortable for you.

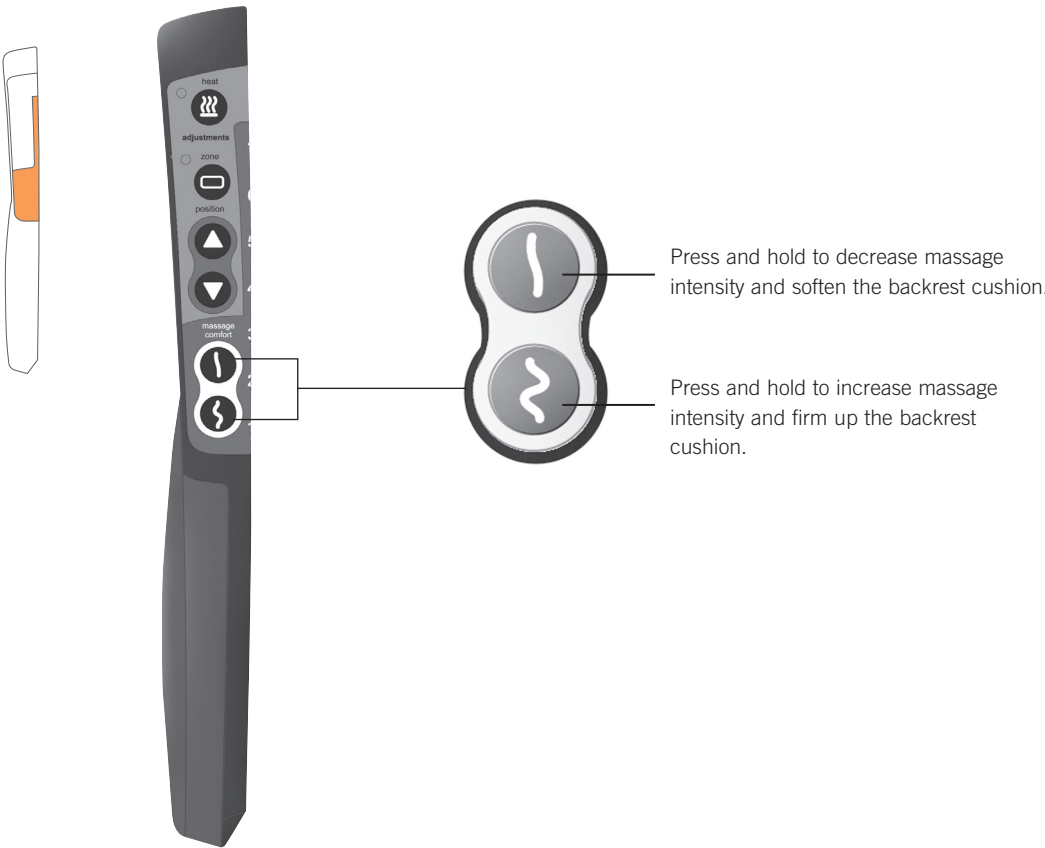


take control

Recline Interrupt Safety Sensor

Your Human Touch massage chair is a powerful precision instrument.
Some simple precautions will ensure safe, reliable operation.



 Keep the area behind the chair clear of all objects. **Do not** allow pets or small children in the Caution Zone, behind the chair.

The Recline Interrupt Safety Sensor, located at the bottom of the backrest, provides added protection for any child, pet, or object located in the Caution Zone behind the chair. The weight-activated Safety Sensor immediately disables the chair recline function when triggered. Once the object has been cleared from the Caution Zone, the chair recline function is automatically re-enabled.

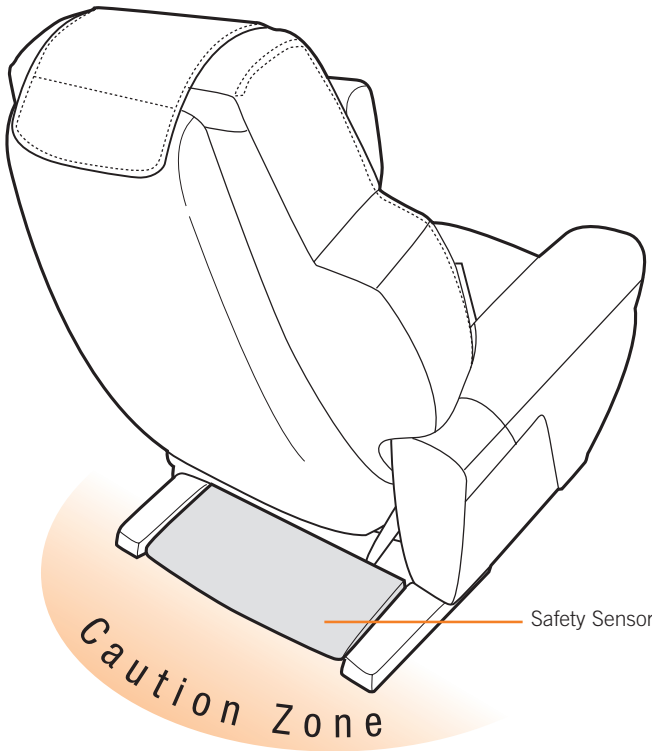

- If the Recline Interrupt Safety Sensor appears damaged or is not functioning, please contact your distributor.
Do not remove the Recline Interrupt Safety Sensor from the chair.
Do not grasp the Recline Interrupt Safety Sensor while moving or picking up the chair.

For personalized comfort, you can position the lumbar/ergo pillow in a variety of locations.

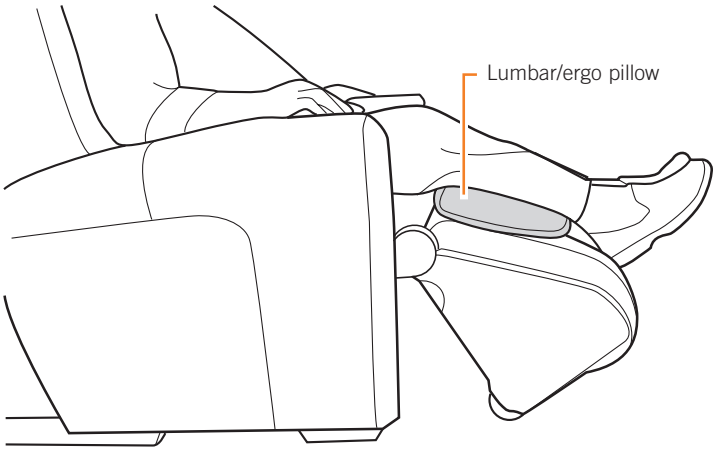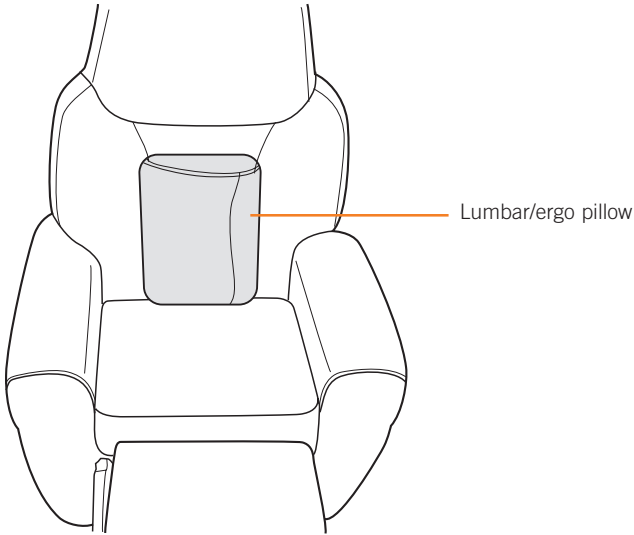

care and maintenance

To keep your product working and looking its best, please follow these simple care guidelines.

Cleaning:

- 1. Be sure to disconnect the power cord from the electrical outlet before cleaning.
- 2. Do not use benzene, thinner or any other solvents on your massage chair.
- 3. Remove dust on the backrest or armrest with a vacuum.
- 4. If the backrest or armrests become soiled, wipe with a damp cloth, then a dry cloth.
- 5. Common upholstery cleaners may be used for tough stains.
- 6. When cleaning the controller or around the power switch, use a dry cloth only. Never use a damp cloth to clean the controller or power switch.

Fabric Care:

To maintain your Human Touch product in optimum condition, dust it frequently and/or vacuum it with a soft brush vacuum extension. SofSuede® products can also be brushed with a suede brush. Wipe with a slightly damp cloth as necessary. For tougher stains on non-leather products, use a mild detergent mixed with water. Leather products should be wiped down occasionally with a leather furniture cleaning solution.



WARNING:

Be sure to test any cleaning solution on a small, inconspicuous part of the product to ensure that the color does not fade prior to using the solution on the entire product surface.

Maintenance and Repair:

- 1. The mechanics of this product are specially designed and constructed to be maintenance free. No periodic lubrication or servicing is required.
- 2. Your chair should only be serviced by an authorized service center.

Use and Storage Environment:

- 1. When not in use for a long period of time, we recommend that the chair be covered, the power cord be coiled and that the unit be placed in an environment free of dust and moisture.
- 2. Do not store near heat or open flame.
- 3. Do not leave this product exposed to direct sunlight for long periods of time. This may cause fading or damage.
- 4. Do not use or store in extreme temperatures; product stored in cold temperatures may require 48 hours at room temperature to function properly.
- 5. Product should be used and stored in an environment with non-condensing humidity ranging from 10 to 80%; excessive humidity will damage the mechanics.


Miscellaneous:

- 1. Foreign objects should not be inserted between the massage nodes or the unit housing.
- 2. Care should be taken not to overload the unit.

Moving your massage chair after it has been unpacked:




Your massage chair is a precision instrument that can be damaged if dropped. Use at least two people to move it.

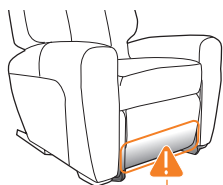

DO NOT LIFT HERE

- 1. Fully retract the foot and calf massager.
Make sure the area behind/underneath the footrest is clear of any obstructions before retracting the footrest.
NEVER pick up the chair by grasping the foot and calf massager.
- 2. Store the remote control in the side pocket.
- 3. Grasp the chair at floor level, beneath the side arms.

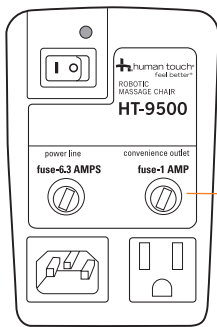

Your Human Touch massage chair has two fuses: one for the chair and one for the convenience outlet.

To replace a fuse:

- 1. Turn the **Power switch to OFF and unplug** the chair from the wall outlet.
- 2. Turn the fuse holder (located on the power panel) approximately 1/8 turn counter-clockwise. The fuse holder pops out.
- 3. Replace the fuse with a new fuse of the same value, then reinsert the fuse holder into the power panel.
- 4. Turn the fuse holder 1/8 turn clockwise to secure it.
- 5. Plug the chair back into the wall outlet and turn it on.

Specifications*

Operating voltage:	AC110-120V 60Hz
Power consumption:	210 Watts
Chair size (reclined):	80"L x 38"W x 26"H
Product weight:	245 Lbs.
Maximum load weight:	285 Lbs.
Rear clearance required:	20"

**Specifications are subject to change without prior notice.*